Windows driver installation

1) Double-click the driver installation package "4BARCODE_2019.1_M-3" to install the driver.



2) Select "I accept the terms in the license agreement" and click "Next".



3) The default installation path is "C:\4BARCODE\2019.1 M-3", and you can click "Browse" to change the installation path.



Hudoo Product LLC

4) Confirm the installation path and click "Next", then click "Finish".

Windows Printer Driv	vers	×	Windows Printer Drivers	×
Installation	Directory ctory to unpack the software.	E <mark>AGULL</mark>	Installation Information Follow the instructions below to install the software.	SEAGULL
The software will be un either type in the new	npacked to the directory listed below. To unpack to path or click Browse to select a different directory.	a different directory,	- Instructions After the drivers are unpacked, install them using the	Driver Wizard.
Installation Directory:	C:\4BARCODE\2019.1 M-3	Browse	- Options	
	Space required on drive:	45.5 MB	Run Driver Wizard after unpacking drivers	
	Space available on selected drive:	27.7 GB	Read installation instructions (contained in 'Installation instructions)	ation_Instructions.html')
	< Back Next >	Cancel	< Bac	k Finish Cancel

5) Select "Install printer drivers" by default and go to the next step.



6) Select "Other" and click "Next".

Seagull Driver Wizard		×
Connect Printer The printer should be connected before	e continuing installation.	Ś
How is this printer going to be attached?		
OUSB		
Network (Ethernet or WiFi)		
OBluetooth		
Other (such as Parallel or Serial)		
Instructions: 1. Connect your printer to the PC. 2. Turn the printer on. 3. Press Next to continue.		^
	< Back Next >	Cancel

7) Select "2054K" and click "Next"

Specify the model of your printer.	
Printer Model	^
4BARCODE 4B-2054E	
4BARCODE 48-2054F	
4BARCODE 4B-2054G	
4BARCODE 4B-2054H	
4BARCODE 4B-2054I	
4BARCODE 48-2054K	
4BARCODE 4B-2054L	~
Source: C:\4BARCODE\2019.1M-3	Browse
/ersion: 2019.1.3 (07/16/2019)	

8) Click "Next" and configure the port in the driver later.

Seagull Driver Wizard		×
Specify Port A port is used to connect a pri	inter to the computer.	
Specify the port that you are using not listed below, create a new por	g. If you are connecting using TCP/IP or anoth t.	er port type
Port	Туре	^
LPT1:	Parallel Port	
COM10:	Serial Port (9600:8N1)	
COM11:	Serial Port (9600:8N1)	
COM12:	Serial Port (9600:8N1)	
COM13:	Serial Port (9600:8N1)	
COM15:	Serial Port (9600:8N1)	~
	Create Port Configu	ure Port
	< Back Next >	Cancel

9) Confirm the driver's name and click "Next" to go to the next step.

Enter a r	name for	this printer.	
Printe	r name:	4BARCODE 4B-2054K	
Constern	de aleren e	r not you want to share this printer with other petw	orkusers When
sharing,	you must	provide a share name.	on docion when
sharing,	you must ot share t	provide a share name. his printer	on decisi when

10) Click "Finish" to complete the driver installation.

Seagull Driver Wizard			\times
	Completin Wizard	g the Seagull Driver	
	Name:	4BARCODE 4B-2054K	
	Share name:	<not shared=""></not>	
	Port:	USB001	
	Default:	No	
	Manufacturer:	4BARCODE	
	Model:	4BARCODE 4B-2054K	
	Version:	2019.1.3 (07/16/2019)	
	Number of installed	d printers to be upgraded: 0	
	To begin the drive	r installation process, click Finish.	
		< Back Finish Cancel	

Configure USB port and paper size under Windows

Configuring the USB port:

1) Open the "Control Panel" and click "View devices and printers".

Adjust your computer's settings

View by: Category 🔻



2) Right-click the driver you installed and select "Printer Properties".



3) Click the "Port" tab.

3	Fonts	- L	Tools	Abo	ut
General	Sharing	Ports	Advanced	Color Management	Security
3	4BARCOD	E 4B-2054K			

4) Select a free USB virtual port "USB001 is selected in the diagram" and click "Apply" to confirm.

1	Fonts		Tools	3540	Abo	ut
General	Sharing	Ports	Advanced	Color	Management	Security
3	4BARCOD	E 4B-2054K	1			
Print to t checked	he following port.	port(s). Do	ocuments will	print to t	he first free	
Port Descrip		ption	Print	er		~
☑ USB001 USB 虛調		拟打ED机的	打印机端口 4BARCODE		3-2054K, prin	ter
USB002 USB 虚我		HU ITEDALA	前口 Argo	Argox 14-240 PPLA		
□ USB011 USB 虚拟		拟打印机的	前口 prin	printer XP-TT426B		
USB	007 USB 虚	制打印机机	前口 prit	nter XP-P	4401B	1.00
USB	005 USB 虚	如 打ED机的	前口 ZDes	ZDesigner GK888t		
USB	013 USB 虚	拟打ED机的	TEP机端口 4BARCODE 4B-2054F			
[] 192.	16 Standa	ard TCP/IP	Port			v
A	dd Port		Delete Port		Configure	Port
Enable	e bidirection	al support				
Enable	e printer poo	ling				

Configuration Paper Size

1) Return to the "General" tab.

Fonts I loois	About
General Sharing Ports Advanced Color Ma	nagement Security

2) Click on "Preferences"

General Sharing			Tools	Abou	.t
General	Sharing	Ports	Advanced	Color Management	Security
3	4BAR	CODE 4B-2	054K		
Location					
Commer	nt:				
					-
Model:	4BARG	CODE 4B-20	054K		
Feature	S N.S.		Deces	LICENCIETES	
Calam	NO		Papera	avallable;	
Color:	e-sided: No				<u></u>
Color: Doubl					
Color: Doubl Staple	No				
Color: Doubl Staple Speed	No Unknown				
Color: Doubl Staple Speed Maxin	No Unknown num resoluti	on: 203 dpi			~

3) Set the new paper size in the "Stock" box on the "Page Setup" tab (the default paper size is 4inch x 7inch).

Fonts		Too	s	About	
4BARCODE	4B-2054K Pri	nting Preferen	ces	×	Securit
age Setup G	aphics Stoc	k Options A	bout		
Stock					-
Name: US	SER (3.94 in x	7.09 in)		~	-
	New	Edit	Del	ete	-
Provinue	Orada	tien.	Effects		
Freview	Onenta Onenta	rait	Mirror Im	age	
OF	OLan	dscape		age .	
	O Port	rait 180°			
	() Lan	dscape 180°			
Preset					
Name: <c< td=""><td>efault Setting</td><td>3></td><td> ✓ Man </td><td>age</td><td>~</td></c<>	efault Setting	3>	 ✓ Man 	age	~
			Advanced Optic	ons	
					×.
	© 2015-20) 19 Seagull Scie	ntific Inc		
	Authors of th	e BarTender® la	bel software.		ge
	ОК	Cancel	Annly	Help	-
	1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1	Sansa	2. 84HC	Tielp	Red ale

4) Follow the prompts to name the new label, and set the length and width of the label in inches.



Hudoo Product LLC

www.hudoo.us

Hudooservice@gmail.com

Easy, Fast, Convenient for your Business!

5) When the settings are complete, click "OK" to return to the Previous Menu, and finally click "Apply" to put the configuration into effect, then click "OK" to save and exit.

Fonts	Tools	Abo	out	Crearel	Fonts		Tools		About
BARCODE 4B-2054K Prir	nting Preferences		Security		ODE 4B	-2054K Printin	g Preference	s	×
v Stock				× Page Setup	Grapi	hics Stock	Options Abo	ut	
ock ame: New Stock		Preview		Stock Name:	New	Stock (3.94 in x	(7.09 in)		~
pe: Die-Cut Labels	~ ~	F				New	Edit	Delete	
ibel Size idth: 3.94 in xposed Liner Widths	Height: 7.09 in				E	Orientation Portrait C Landsca Portrait C Landsca	ape 180° ape 180°	Effects Mirror Image Negative	
				Preset Name:	<defa< td=""><td>ault Settings></td><td></td><td>✓ Manage</td><td></td></defa<>	ault Settings>		✓ Manage	
				1				Advanced Options	
			-		3 ^A	© 2015-2019 uthors of the Ba	Seagull Scienti arTender® labe	ific, Inc., el software. 2	ge
		ОК	Cancel	leip	0	ок с	Cancel	Apply H	elp

6) Click on "Print Self Test Page" to test if it prints normally.

	Fonts		Tools	Abo	out
General	Sharing	Ports	Advanced	Color Management	Security
3	4BAR	CODE 4B-2	054K		
Location					
Comme	nt:				
Model: Feature	4BAR	CODE 4B-20	054K		
Model: Feature Color:	4BAR es No	CODE 4B-20	054K Paper a	available:	
Model: Feature Color: Doubl	4BAR 4BAR No e-sided: No	CODE 4B-20	054K Paper a	available:	8
Model: Feature Color: Doubl Staple	4BAR ABAR No e-sided: No : No	CODE 4B-20	D54K Paper a	available:	· .
Model: Feature Color: Doubl Staple Speed	4BAR 4BAR No e-sided: No : No : Unknown	CODE 4B-20	D54K Paper a	available:	<i>•</i>
Model: Feature Color: Doubl Staple Speed Maxin	4BAR ABAR No e-sided: No : No : Unknown num resoluti	CODE 4B-20	D54K	available:	×

Hudoo Product LLC

Windows driver installation

1) Double-click the driver installation package "4BARCODE_2019.1_M-3" to install the driver.



2) Select "I accept the terms in the license agreement" and click "Next".



3) The default installation path is "C:\4BARCODE\2019.1 M-3", and you can click "Browse" to change the installation path.

Vindows Printer Dri	vers		>
Installation Please select the dire	Directory ctory to unpack the software.	SE/	AGULI
The software will be u either type in the new	npacked to the directory listed below. To path or click Browse to select a different	o unpack to a dif directory.	ferent directory.
nstallation Directory:	C:\4BARCODE\2019.1 M-3		Browse
	Space required on drive:		45.5 MB
	Space available on selected drive:		27.7 GB

Hudoo Product LLC

4) Confirm the installation path and click "Next", then click "Finish".

Windows Printer Driv	vers	×	Windows Printer Drivers	×
Installation	Directory ctory to unpack the software.	E <mark>AGULL</mark>	Installation Information Follow the instructions below to install the software.	SEAGULL
The software will be un either type in the new	npacked to the directory listed below. To unpack to path or click Browse to select a different directory.	a different directory,	After the drivers are unpacked, install them using the Driver	Wizard.
Installation Directory:	C:\4BARCODE\2019.1 M-3	Browse	Options Pup Driver Wiscard after uppocking drivers	
	Space required on drive: Space available on selected drive:	45.5 MB 27.7 GB	Read installation instructions (contained in "Installation_	Instructions.html")
	< Back Next >	Cancel	< Back	Finish Cancel

5) Select "Install printer drivers" by default and go to the next step.

Seagull Driver Wizard		×
	Welcome to the Seagull Driver Wizard This wizard helps you install and remove printer drivers.	
	What would you like to do? Install printer drivers Upgrade printer drivers Remove printer drivers	
	Please save all work and close all applications before proceeding. This process may require Windows to be restarted.	
	< Back Next > Cance	el

6) Select "Other" and click "Next".

Seagull Driver Wizard	\times
Connect Printer The printer should be connected before continuing installation.	
How is this printer going to be attached?	
OUSB	
O Network (Ethernet or WiFi)	
OBluetooth	
Other (such as Parallel or Serial)	
Instructions:	~
1. Connect your printer to the PC. 2. Turn the printer on.	
3. Press Next to continue.	
	~
< Back Next >	Cancel
VOLK NEXT	Cancer

7) Select "2054K" and click "Next"

Specify th	e model of your printer.	
Printer M	iodel	^
4BARCO	DE 48-2054E	
4BARCO	DE 48-2054F	
4BARCO	DE 48-2054G	
4BARCO	DE 48-2054H	
4BARCO	DE 48-2054I	
4BARCO	DE 48-2054K	
4BARCO	DE 48-2054L	
Source:	C:\4BARCODE\2019.1 M-3	Browse

<u>www.hudoo.us</u>

8) Click "Next" and configure the port in the driver later.

Seagull Driver Wizard		×
Specify Port A port is used to connect a pri	nter to the computer.	Ŷ
Specify the port that you are using not listed below, create a new port	g. If you are connecting using TCP/IP or anoth t.	ier port type
Port	Туре	^
LPT1:	Parallel Port	
COM10:	Serial Port (9600:8N1)	
COM11:	Serial Port (9600:8N1)	
COM12:	Serial Port (9600:8N1)	
COM13:	Serial Port (9600:8N1)	
COM15:	Serial Port (9600:8N1)	~
	Create Port Configu	ure Port
	< Back Next >	Cancel

9) Confirm the driver's name and click "Next" to go to the next step.

Enter a name for	this printer.
Printer name:	4BARCODE 4B-2054K
Use this printe	r as the default printer
Specify whether of	or not you want to share this printer with other network users. When
sharing, you must	provide a share name.
Use this printe	r as the default printer
Specify whether of	or not you want to share this printer with other network users. When
sharing, you must	provide a share name.
Do not share t	his printer

10) Click "Finish" to complete the driver installation.

Seagull Driver Wizard			\times
	Completin Wizard	g the Seagull Driver	
	Name:	4BARCODE 4B-2054K	
	Share name:	<not shared=""></not>	
	Port:	USB001	
	Default:	No	
	Manufacturer:	4BARCODE	
	Model:	4BARCODE 4B-2054K	
	Version:	2019.1.3 (07/16/2019)	
	Number of installed	d printers to be upgraded: 0 r installation process, click Finish.	
	5		
		< Back Finish Cancel	

Configure USB port and paper size under Windows

Configuring the USB port:

1) Open the "Control Panel" and click "View devices and printers".



2) Right-click the driver you installed and select "Printer Properties".



Hudoo Product LLC

hudaa

3) Click the "Port" tab.

F	onts		Tools	Ab	out
General	Sharing	Ports	Advanced	Color Management	Securit
	4RARCOD	F 4R-2054K			
5	4BARCOD	E 4B-2054K			
5	4BARCOD	E 4B-2054K			
5	4BARCOD	E 4B-2054K			
3	4BARCOD	E 4B-2054K			

4) Select a free USB virtual port "USB001 is selected in the diagram", and click "Apply" to confirm.

F	onts		Tools	Abo	out
General	Sharing	Ports	Advanced	Color Management	Security
3	4BARCODI	4B- <mark>2</mark> 054K			
Print to th checked p	ne following port.	port(s). Do	ocuments will p	print to the first free	121
Port	Descrip	otion	Printe	er v	^ ^
USB0	101 USB 虛	拟打EP机站	端口 4BAR	CODE 4B-2054K, Xprin	iter . <mark>.</mark>
USB0	02 USB 虛	拟打印机站	端口 Argox	14-240 PPLA	
USB0	11 USB 虛	拟打印机端	≓□ Xprint	ter XP-TT426B	
USB0	007 USB 虛	拟打印机端	端口 Xprint	ter XP-P4401B	
USB0	005 USB 虛	拟打ED机站	端口 ZDesi	gner GK888t	
USB0	13 USB 虚	拟打ED机站	端口 4BAR	CODE 4B-2054F	
192.1	6 Standa	rd TCP/IP F	Port 🧧		Ŷ
Ac	ld Port		Delete Port	Configure	Port
Enable	bidirectiona	I support			
	printer poor	ing			

Configuration Paper Size

1) Return to the "General" tab.

For	nts		Tools		Abou	π
ieneral	Sharing	Ports	Advanced	Color	Management	Security

2) Click on "Preferences"

General	CI.				
	Sharing	Ports	Advanced	Color Management	Security
3	4BAR	CODE 4B-2	054K		
Location:					
Comment					
Model: Features	4BARC	CODE 4B-20	054K		
Color: N	lo		Paper	available:	45
Double-	sided: No				2
Staple: N	Vo				
Speed: L	Jnknown				
Maximu	im resolutio	on: 203 dpi			v
			Preferences	Print Test	Page

Hudoo Product LLC

Easy, Fast, Convenient for your Business!

3) Set the new paper size in the "Stock" box on the "Page Setup" tab (the default paper size is 4inch x 7inch).

Fonts	Too	Tools		
4BARCODE 4E	-2054K Printing Preferen	ces	×	
age Setup Grap	ohics Stock Options A	bout		
Stock			-	
Name: USE	R (3.94 in x 7.09 in)	2045	<u> </u>	
	New Edit	. Delete		
Preview	Orientation	Effects		
	Portrait	Mirror Image		
ALE	◯ Landscape	Negative		
	O Portrait 180°			
	◯ Landscape 180°			
Preset				
Name: <del< td=""><td>ault Settings></td><td>V Manage</td><td></td></del<>	ault Settings>	V Manage		
		Advanced Options		
		a brance opinion		
<u>.</u>	© 2015-2019 Seagull Scie	ntific, Inc.,	-	
1	Authors of the BarTender® la	abel software.	ge	

4) Follow the prompts to name the new label, and set the length and width of the label in inches.

0.000	Fonts		Tools		About		-
4BARC	ODE 48-2054k	Printing Pref	erences		×	Security	
ew Stoc	k						
Stock		10		Preview			
Name:	New Stock						
Type:	Die-Cut Label	s	~				7
l abel Si:	7e						
Width:	3.94 in	Height:	7.09 in				
Exposed Left	0.08 in	Bight:	0.08 in				
							$ \rightarrow $
					ок	Cancel	Help
					2516000	L SECRET COLES	1000

Hudoo Product LLC

Easy, Fast, Convenient for your Business!

5) When the settings are complete, click "OK" to return to the Previous Menu, and finally click "Apply" to put the configuration into effect, then click "OK" to save and exit.

Fonts	Tools	About	Fonts	Toc	ls	About Securi
BARCODE 4B-2054K Pr	rinting Preferences	× Security	4BARCODE	4B-2054K Printing Preferer	ices	×
w Stock			X Page Setup Gr	aphics Stock Options A	bout	
tock	Pre	view	Name: Ne	w Stock (3.94 in x 7.09 in)		e
pe: Die-Cut Labels			ı E	New Edit.	Delete	
abel Size /idth: 3.94 in xposed Liner Widths eft: 0.08 in	Height: 7.09 in Right: 0.08 in		Preview ALE WINNU Preset	Orientation Portrait Landscape Portrait 180° Landscape 180°	Effects	
			Name: <d< td=""><td>lefault Settings></td><td> ✓ Manage </td><td></td></d<>	lefault Settings>	 ✓ Manage 	
					Advanced Options	
		1 OK Cancel	Help 3	© 2015-2019 Seagull Sci Authors of the BarTender® I	entific, Inc., abel software. 2	ge

6) Click on "Print Self Test Page" to test if it prints normally.

F	onts		Tools	s About		rt
General	Sharing	Ports	Advanced	Colo	r Management	Security
3	4BAR	CODE 4B-2	054K			1
Location: Commen	t:					
Model:	4BAR	CODE 4B-2	054K			
Features Color: I	s No		Paper a	availabl	e:	
Double	-sided: No				1949) 1949)	~
Staple:	No					
Speed: Maxim	Unknown um resoluti	on: 203 dpi	1-			~
			Preferences		Print Test F	oage

Hudoo Product LLC

Mac driver installation + configure USB port

1) Double-click "4Barcode.pkg" to open the driver installation package.



2) Click "Continue" to go to the next step.



3) Click "install"

	0	🥪 In	stall 4Barcode		
		Standard Install	on "未命名"		
	Introduction Destination Select Installation Type Installation Summary	This will take Click Install to on the disk ";	297 KB of space on your o perform a standard inst 未命名".	computer. allation of this s	oftware
Hudoo Product LL	C www.hudoo.	us H	udooservice@gmail.c	om	+1(669)2049379

Easy, Fast, Convenient for your Business!

4) Enter your macOS password in the pop-up window and click "Install Software".

0	🥪 Install 4Barcode
	Standard Install on "未命名"
Introduction Destination Select Installation Type	This will take 297 KB of space on your computer. Click Install to perform a standard installation of this software on the disk "未命名".
Installat	
• Summar	Installer is trying to install new software. Enter your password to allow this. User Name: k Password: •••• Cancel Install Software
	Customize Go Back Insta

5) Click "Close" to complete the installation.

0 0	🥪 Install 4Barcode
 Introduction Destination Select Installation Type Installation Summary 	The installation was completed successfully.
	Go Back

Hudoo Product LLC

6) Connect the printer to the computer via USB and then turn on the printer's power.

7) Open the "Printers and Scanners" option and the corresponding driver will automatically pop up.

4BARCODE 4B-2054A	4BARC	CODE 48-2054A
📷 🔹 Idle, Last Used	Op	en Print Queue
	Opt	ions & Supplies
	Location: k的Mac	5
	Kind: 4B-205	4A
	Status: Idle	
	Share this printer on the	e network Sharing Preferences.
	Default printer: Last F	Printer Used 📀
	Default paper size: A4	

Linux driver installation + configuration of USB interface

1) Download the Linux driver "4BARCODE" to the download files, right-click on an empty space to open the terminal.

<	> 🔸 🏠 Home	Downloads			۹	::	Ξ	000
0	Recent	Name				Size	- B	Modified 🔻
ŵ	Home	4BARCODE				33.1 ki	в	258月
(m)	Desktop	_						
۵	Documents							
99	Music							
ø	Pictures							
-	Videos							
	Trash							
			New Folder	Shift+Ctrl+N				
6	Floppy Disk		Paste	Ctrl+V				
	OtherLocations		Select All	Ctrl+A				
2440	Other Educations		Properties	Ctrl+I				
			Open in Terminal					

2) Type "Is" and press "Enter" to confirm.



3) Type "sudo chmod 777 4BARCODE" and press "Enter" to confirm.



4) Type the system's password and press "Enter" to confirm. (The password is invisible when entering the password).



5) Type "sudo . /4BARCODE", and press "Enter" to confirm.



6) Connect the printer to the computer via USB and then turn on the printer's power.

Vertices
Printers

Displays

Keyboard

Mouse & Touchpad

Printers

Removable Media

Thunderbolt

Made...

Vacom Tablet:

Color

No printers

Add a Printer...

7) Open the system's settings and go to the "Printer" option, click "ADD" to add printer.

Easy, Fast, Convenient for your Business!

8) At the time corresponding printer model will automatically appear in the list, select it and click "ADD", and the driver will add to the system.

